

# DENON


## STEREO CD PLAYER

# DCM-370/270


## OPERATING INSTRUCTIONS

## MODE D'EMPLOI

## INSTRUCCIONES DE OPERACION

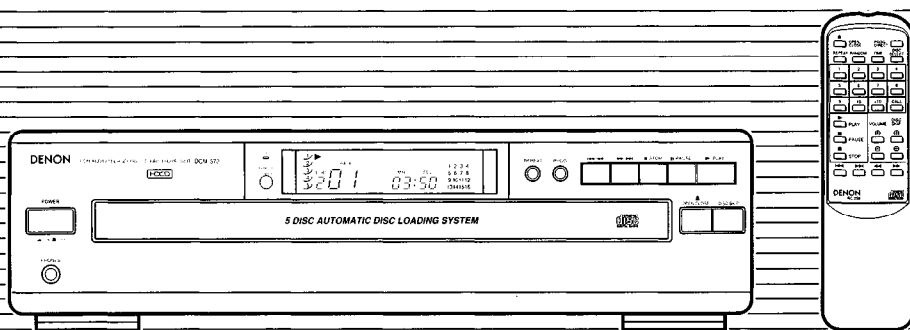

DCM-370

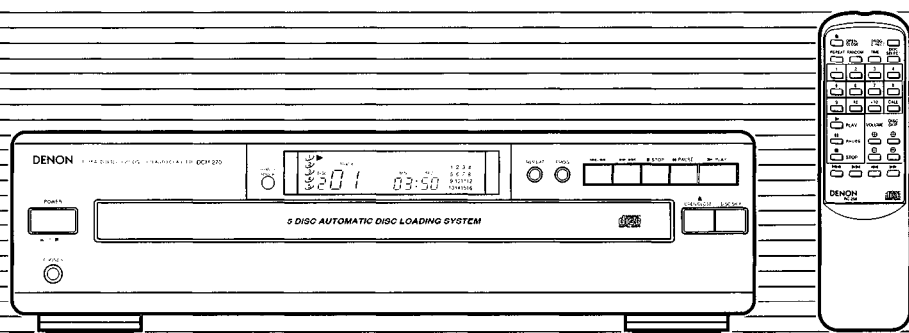

DCM-270

## IMPORTANT TO SAFETY

### WARNING:

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### CAUTION:

#### 1. Handle the power supply cord carefully

Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.

#### 2. Do not open the top cover

In order to prevent electric shock, do not open the top cover. If problems occur, contact your DENON dealer.

#### 3. Do not place anything inside

Do not place metal objects or spill liquid inside the CD player. Electric shock or malfunction may result.

Please, record and retain the Model name and serial number of your set shown on the rating label.

Model No. DCM-370/270

Serial No. \_\_\_\_\_



### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### NOTE:

This CD player uses the semiconductor laser. To allow you to enjoy music at a stable operation, it is recommended to use this in a room of 10°C (50°F) ~ 35°C (95°F).

### LABELS (for U.S.A. model only)

#### CERTIFICATION

THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J APPLICABLE AT DATE OF MANUFACTURE.

### CAUTION:

**USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### • FOR U.S.A. & CANADA MODEL ONLY

#### CAUTION

TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

#### • POUR LES MODELES AMERICAINS ET CANADIENS UNIQUEMENT

#### ATTENTION


POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

# SAFETY INSTRUCTIONS



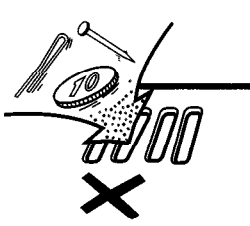
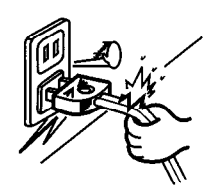
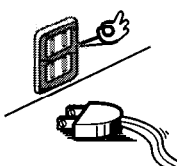
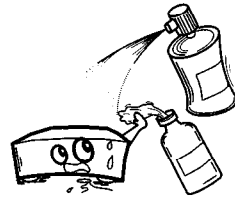
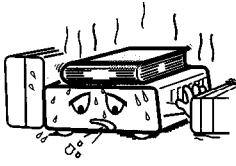
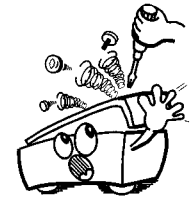
1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization – Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.



12. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines – An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
17. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

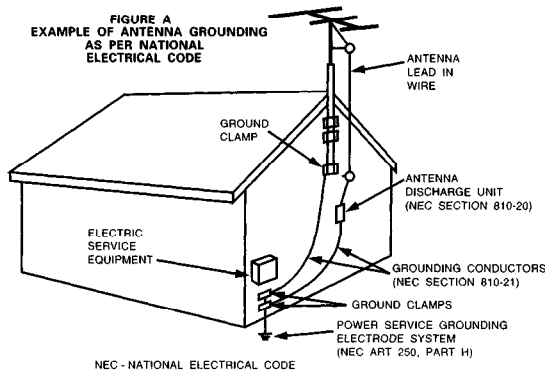

# NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION / NOTAS SOBRE EL USO

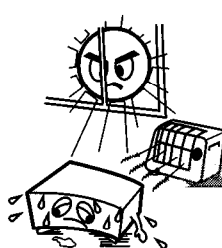 <ul style="list-style-type: none"> <li>• Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack.</li> <li>• Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.</li> <li>• Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola.</li> </ul>	 <ul style="list-style-type: none"> <li>• Keep the set free from moisture, water, and dust.</li> <li>• Protéger l'appareil contre l'humidité, l'eau et la poussière.</li> <li>• Mantenga el equipo libre de humedad, agua y polvo.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects in the set.</li> <li>• Ne pas laisser des objets étrangers dans l'appareil.</li> <li>• No deje objetos extraños dentro del equipo.</li> </ul>
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully. Hold the plug when unplugging the cord.</li> <li>• Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.</li> <li>• Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.</li> </ul>	 <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the set for long periods of time.</li> <li>• Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> <li>• Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let insecticides, benzene, and thinner come in contact with the set.</li> <li>• Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.</li> <li>• No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.</li> </ul>
<p><b>CAUTION:</b></p> <p>At the bottom of the player there are two red shipping screws for use when the player is transported. Before using the player, turn these screws counterclockwise and remove them.</p> <p>If the shipping screws are still in place and the power is turned on, the disc tray will not open. If this happens, turn off the power, unplug the power cord from the power outlet and remove the shipping screws.</p> <p>Retain these screws as they will be needed when the player is transported.</p> <p>Before transporting the player, take out the discs, close the disc tray, turn off the power after "0 00 00:00" is displayed and unplug the power cord from the power outlet. Then install the shipping screws by turning them clockwise. Be sure to fasten them securely.</p>	 <p>* (For sets with ventilation holes)</p> <ul style="list-style-type: none"> <li>• Do not obstruct the ventilation holes.</li> <li>• Ne pas obstruer les trous d'aération.</li> <li>• No obstruya los orificios de ventilación.</li> </ul>	 <ul style="list-style-type: none"> <li>• Never disassemble or modify the set in any way.</li> <li>• Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.</li> <li>• Nunca desarme o modifique el equipo de ninguna manera.</li> </ul>

## PRECAUCION:

En la parte inferior del reproductor hay dos tornillos de transporte para su utilización durante el transporte. Antes de utilizar el reproductor, gire estos tornillos en sentido contrario a las agujas del reloj y extráigalos.

Si se activa la alimentación y los tornillos de transporte todavía están en su sitio, la bandeja de discos no se abrirá. Si ocurriera esto, desconecte el cable de alimentación de la toma de red eléctrica general y extraiga los tornillos de transporte. Guarde estos tornillos ya que serán necesarios cuando se transporte el reproductor.

Antes de transportar el reproductor, saque los discos, cierre la bandeja de discos, desactive la alimentación después de que se visualice "0 00 00:00" y desconecte el cable de alimentación de la toma de red. A continuación proceda a instalar los tornillos de transporte girándolos en el sentido de las agujas del reloj. Asegúrese de fijarlos firmemente.


## ATTENTION:

Au fond du lecteur, se trouvent deux vis de transport rouges, à utiliser lors du transport du lecteur. Avant d'utiliser le lecteur, tourner ces vis dans le sens inverse des aiguilles d'une montre, et les retirer.

Si les vis de transport sont encore en place et l'alimentation allumée, le plateau de disque ne s'ouvrira pas. Si cela se produit, couper l'alimentation, débrancher le cordon d'alimentation de la prise de sortie d'alimentation, et retirer les vis de transport.

Conserver ces vis, car elle seront nécessaires lors d'un transport du lecteur.

Avant de transporter le lecteur, retirer les disques, fermer le plateau de disque, couper l'alimentation après que "0 00 00:00" ait été affiché, et débrancher le cordon d'alimentation de la prise de sortie d'alimentation. Puis installer les vis de transport en les tournant dans le sens des aiguilles d'une montre. Assurez-vous de les avoir serrées solidement.

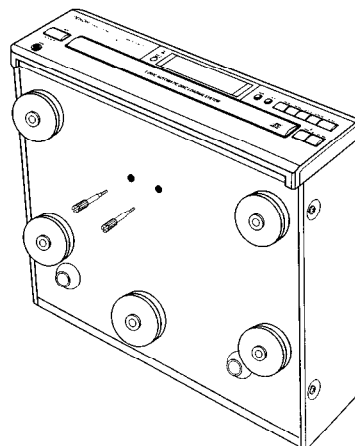

Thank you for purchasing the DENON compact disc player. Read the Operating Instructions thoroughly, and operate this player properly.

## — TABLE OF CONTENTS —

FEATURES .....	5
CAUTIONS DURING USE .....	5
NAMES OF PARTS AND THEIR FUNCTIONS .....	6, 7
OPENING AND CLOSING THE DRAWER AND LOADING A DISC .....	8
CONNECTIONS .....	9
NORMAL PLAY .....	9
OTHER PLAY METHODS .....	10~13
INSTALLATION PRECAUTIONS .....	14
PLAY USING THE REMOTE CONTROL UNIT .....	14, 15
COMPACT DISCS .....	16
TROUBLE? CHECK THE PLAYER TO FIND WHAT'S WRONG .....	16
SPECIFICATIONS .....	16

In addition to the CD Player unit, please check to make sure the following items are included in the packing box.

- |                                       |   |
|---------------------------------------|---|
| (1) Operating Instructions .....      | 1 |
| (2) Connection Cords .....            | 1 |
| (3) Remote Control Unit RC-258 .....  | 1 |
| (4) R6P (AA size) Dry batteries ..... | 2 |

### IMPORTANT (CANADIAN MODEL ONLY)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communication.

## CAUTIONS DURING USE

- This compact disc player is capable of playing discs which have the mark at right.
- During track selection, during search and when the player sustains a strong impact, the disc's rotational speed changes greatly, causing a small noise to be emitted. This is not a malfunction of the player.
- If the CD player is operated while an FM or AM broadcast is being received, there may be noise in the FM or AM reception. Please switch the power to the CD player off at such times.
- The DCM-370/270 has a broad dynamic range. Please exercise caution when turning up the volume on the amplifier in cases when the playback volume is low. If the volume is turned up too high, it could damage the speakers.
- Do not use any discs but exclusive audio discs with this CD player.



## FEATURES

### (1) HDCD® (High Definition Compatible Digital) decoder (DCM-370)

HDCD is an encoding/decoding technology that greatly reduces the distortion occurring at the time of digital recording while maintaining compatibility with the conventional CD format. HDCD allows 20-bit data to be converted into the 16-bit data of current CDs with no loss in sound quality.

The use of this HDCD decoder makes it possible to achieve the high resolution and low distortion characteristic of HDCD when playing HDCD-compatible discs, and DENON's digital technology optimizes the high sound quality possibilities of HDCD technology. Furthermore, normal CDs and HDCD-compatible CDs are automatically identified, and the optimum digital signal processing for that type of disc used.

### (2) High performance digital filter

The DCM-370/270 uses high precision 8-times oversampling digital filters.

### (3) Simple Playback of 8cm CD Singles

8cm CD singles can be played without using an adaptor.

### (4) Programming of up to 32 tracks

All of the tracks on a CD can be programmed to play in any order. Programming in units of discs (all tracks on a disc) is also possible.

### (5) Newly developed carousel-type changer mechanism included

This mechanism can house five discs, and while one disc is playing the remaining four discs can be changed. In addition, the carousel can be rotated either clockwise or counterclockwise, so searching between discs is fast.

### (6) Wireless Remote Control Accessory

In addition to general operations such as Play, Stop and Pause, this remote control unit enables direct selection, direct programming, and other functions. Use of the remote control unit adds greatly to the operating ease of the DCM-370/270, enhancing its outstanding features.


- Placing this player or its connection cords near a TV or other audio device could cause a humming sound to be emitted. If this occurs, relocate the player or reroute the connection cords.
- Be sure to remove the disc from the player before moving it. The disc could be damaged if left in the player while it is being moved.
- Do not place any object in the tray in the position where the disc is loaded, or open and close the tray with anything inside. Foreign objects in the tray could damage the play mechanism.
- Do not move the player from a cold place to a warm place suddenly. If the player is cold when brought into a warm room, condensation could form, preventing proper operation of the player. If condensation does form on the player when it is brought into a warm room, wait at least 30 minutes before use.

### CAUTION:



1. Always remove all discs from the trays when moving the set. Failure to do so may damage the set.
2. When the power is turned off, the varied level will be cleared and be set to 0 dB.

NAMES OF PARTS AND THEIR FUNCTIONS


FRONT PANEL

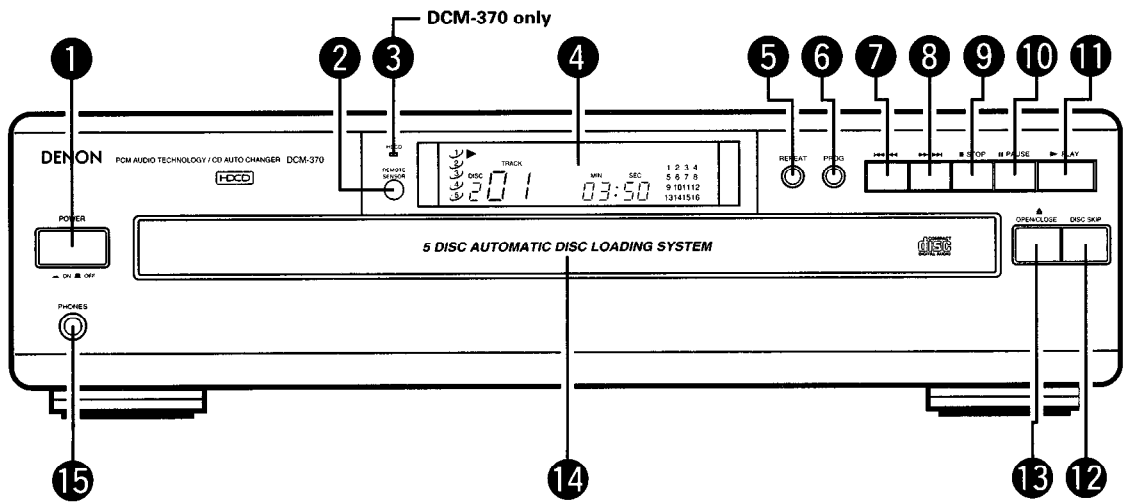

REAR PANEL

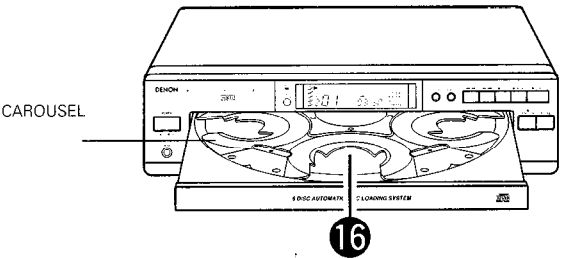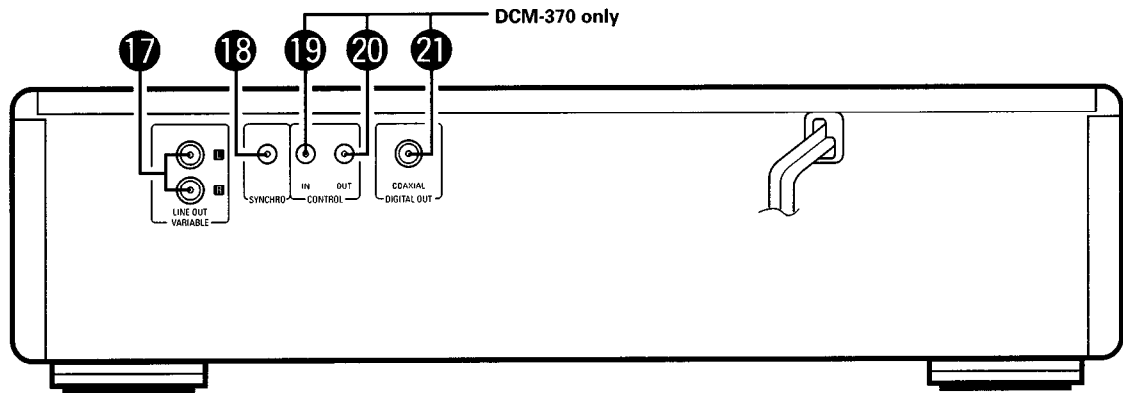

DISPLAY

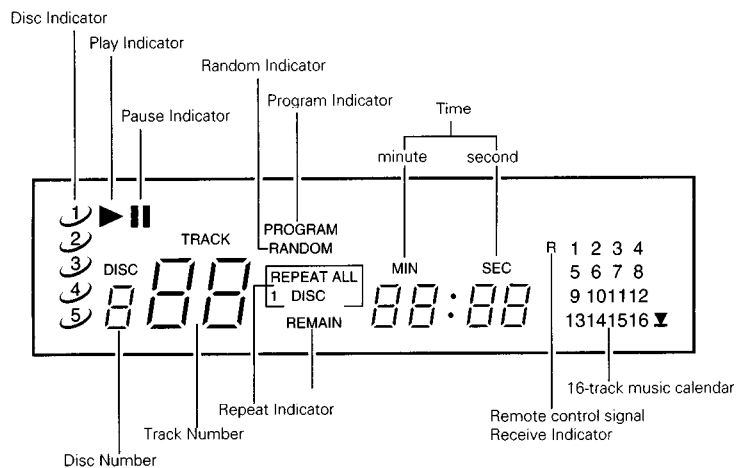

**1 Power Switch (POWER)**

- Press this button to switch on the power.

**2 Remote Control Receptor (REMOTE SENSOR)**

- This receptor receives infrared signals from the wireless remote control unit.
- Aim the wireless remote control unit at this receptor window when operating it.

**3 HDCD Indicator (DCM-370 only)**

- This lights when an HDCD-compatible disc is playing.

**4 Display Window**

- The Disc No., Track No., playing time and other information are displayed in the display window.

**5 Repeat Button (REPEAT)**

- Press this button for repeated playback. The **[REPEAT]** indicator appears on the display. The following three types of repeat modes are available.
  - When pressed once, the **[REPEAT]** and **[1]** indicators light and the track currently playing is repeated.
  - When pressed again, the **[REPEAT]** and **[1 DISC]** indicators light and all the tracks on the disc currently playing are repeated.
  - When pressed again, the **[REPEAT]**, **[ALL]** and **[DISC]** indicators light and all the discs currently set on the tray are repeated.
  - When pressed again, the **[REPEAT]**, **[ALL]** and **[DISC]** indicators turn off and the repeat mode is cancelled.
- The repeat function can also be used during programmed and random playback, but in this case only the all repeat (**[ALL]** and **[DISC]** indicator) mode is available.  
(Refer to page 11 for details.)

**6 Program Button (PROG)**

- Press this button when you want to enter tracks for programmed playback. (Refer to page 10 for details.)

**7 Automatic/Manual Search Reverse Button (◀◀/◀)**

- Press this button to return the pickup to the beginning of the present track. Press again to return to other tracks.
- By pressing the button a number of times, the pickup will move back the corresponding number of tracks.
- Keep on pressing this button for more than 0.5 seconds during playback for fast reverse search. As long as the button is kept pressed, music signals are played back faster than normal.
- Keep on pressing this button for more than 5 seconds, reverse search becomes approximately 4 times faster.

**8 Automatic/Manual Search Forward Button (▶▶/▶)**

- Press this button to move the pickup forward to the beginning of the next track. Press again to move ahead to other tracks.
- By pressing the button a number of times, the pickup will advance the corresponding number of tracks.
- Keep on pressing this button for more than 0.5 seconds during playback for fast forward search. As long as the button is kept pressed, music signals are played back faster than normal.
- Keep on pressing this button for more than 5 seconds, forward search becomes approximately 4 times faster.

**9 Stop Button (■ STOP)**

- Press this button to stop play.

**10 Pause Button (⏸ PAUSE)**

- Press this button to stop play temporarily.
- Pressing the Pause button during play stops play temporarily. The **[▶]** indicator goes off and the **[⏸]** indicator lights up.
- To cancel the Pause state, press either the Play button **11** or the Pause button **10** a second time.

**11 Play Button (▶ PLAY)**

- Press this button to play a disc.
- The **[▶]** indicator lights up when the button is pressed, the number of the disc and the track being played is displayed by the Disc Number and Track No. indicator, and the amount of elapsed time for the current track is displayed by the Time indicator.
- The **[▶]** indicator goes off after playing of the final track of the final disc is finished and the player stops.

**12 Disc Skip Button (DISC SKIP)**

- Each time this button is pressed, the carousel will rotate in a clockwise direction to the next tray position. This allows for loading or unloading of discs.
- This button is also used to select the next disc, in the normal play continuously.

**13 Open/Close Button (▲ OPEN/CLOSE)**

- Press this button when opening.
- The drawer is opened toward the front.
- Press the button again to close the drawer.

**14 Loading Drawer**

- Discs can be loaded and unloaded when this drawer is open. Do not force the drawer closed by hand.

**15 Headphone Jack (PHONES)**

- Insert the jack of the headphones when desiring to listen to a disc privately. (Headphones are sold separately.)

**16 Disc Trays (1 ~ 5)**

- One disc per tray can be loaded.

**17 Output Terminal (LINE OUT)**

- Connect the connection cords from these terminals to the amplifier's input terminals. (Refer to page 9 for connections.)

**18 SYNCHRO Jack (SYNCHRO)**

- To make a synchronized recording, this jack must be connected to the SYNCHRO jack of the deck with a connection cord. (Refer to page 9 for connections.)

**19 Control Input Connector (CONTROL IN) (DCM-370 only)**

- This is the input connector for wired remote control.
- Consult your DENON dealer if you wish to use this connector.

**20 Control Output Connector (CONTROL OUT) (DCM-370 only)**

- This is the output connector for wired remote control.
- Consult your DENON dealer if you wish to use this connector.

**21 Digital Audio Output Connector (COAXIAL) (DCM-370 only)**

- Connect a commercially available 75 Ω/ohms pin-plug cord.
- Digital data is output from this connector.

**Continuous Button Operation**

If the automatic/manual search reverse button **7** or the automatic/manual search forward button **8** are held in, the function of that button will be repeated.

## OPENING AND CLOSING THE DRAWER AND LOADING A DISC

**Opening and closing the drawer** (This operation only works while the power is on.)





1. Press the power switch (POWER) to turn on the power.
2. Press the open/close button (▲ OPEN/CLOSE).

**How to load a disc**

- Make sure the drawer is completely open.
- Hold the disc by the edges and place it on the disc tray. (Do not touch the signal surface, i.e., the glossy side.)
- Set the disc properly in the tray according to its size.  
Set 8 cm discs in the center hole.  
Set 12 cm discs in the outer hole.
- When the drawer is opened during the stop mode, discs can be loaded in the 3 disc trays. If the DISC SKIP button is pressed, the carousel turns and a disc can be loaded in the another disc tray.  
When the drawer is opened during the play mode, it is possible to load and unload discs in all of the disc trays other than the one whose disc is currently playing. 3 discs can be replaced and press the DISC SKIP button to switch the other disc tray that can be replaced.
- Press the open/close button (▲ OPEN/CLOSE) to close the drawer.

**Caution:**

- The player will not operate properly and the disc may even be damaged if it is not set correctly.
  - If your finger should get caught in the drawer when it closes, press the open/close button (▲ OPEN/CLOSE).
  - Do not place any foreign objects on the disc tray, and do not place more than one disc on the tray at a time. Otherwise malfunction may occur.
  - Do not push in the disc tray manually when the power is off as this may cause malfunction and damage the CD player.
  - Do not touch the carousel while it is turning. Also, do not turn the carousel by hand when it is stopped. Doing so could damage it.
- 
- Do not insert disc where indicated by arrow.  
This could damage the internal mechanism in the unit.

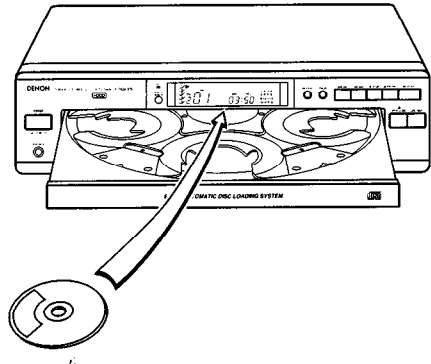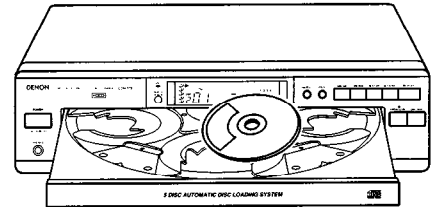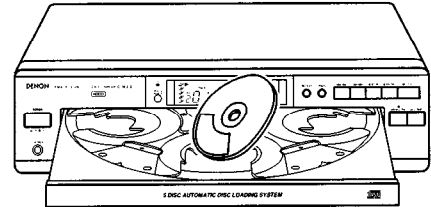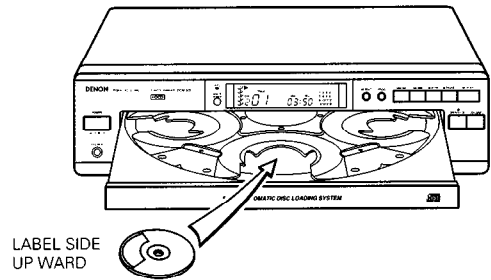




## CONNECTIONS


### (1) Connecting the Output Terminal

- Connect one end of the connection cord supplied with the CD Player to the output terminals, left (L) and right (R) of the CD Player, and the other end to the CD, AUX or TAPE PLAY input terminals, left (L) and right (R), of the amplifier.

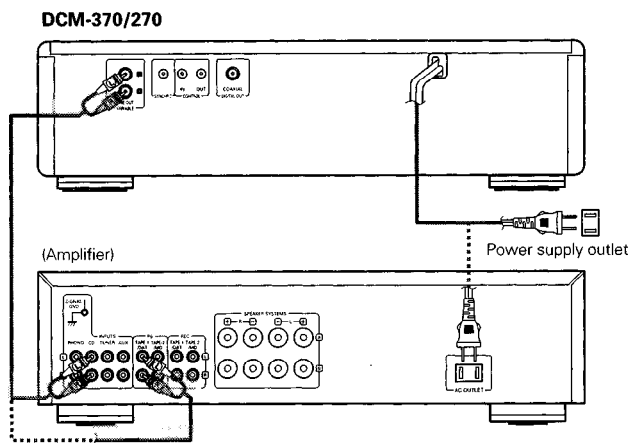


### (2) Connecting the Digital Output Jack (COAXIAL) (DCM-370 only)

- Use a 75  $\Omega$ /ohm pin cord to connect the digital output jack (COAXIAL) of the DCM-370 to the digital input jack (COAXIAL) on a digital processor or MD recorder, available in stores.

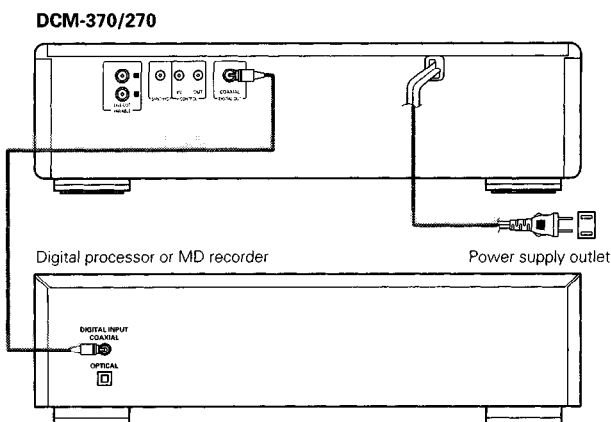

### (3) SYNCHRO Jack Connections


- Connect the SYNCHRO jack with a DENON cassette deck which is equipped with a SYNCHRO jack, then make a synchronized recording. Use the connection cord supplied with the cassette deck.
- To make use of this function, also connect the output jacks and make the settings so that a recording can be made from the CD player to the cassette deck.

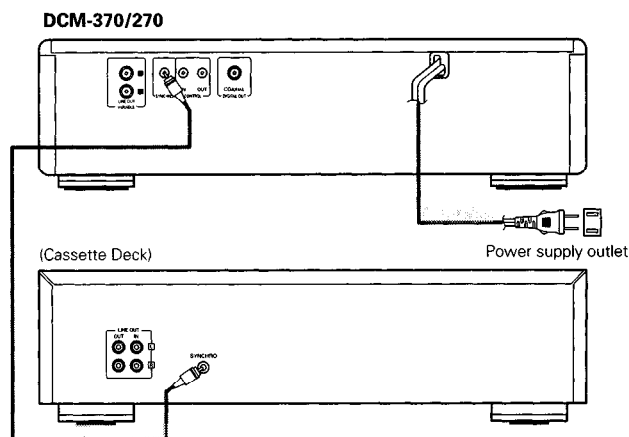

## NORMAL PLAY

Follow the steps below to get an understanding of the disc play procedure.


### (1) Starting Playback

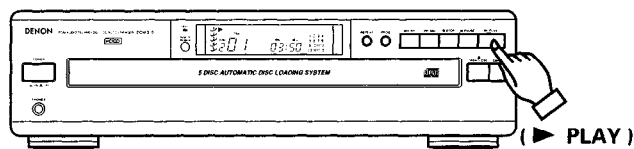

- Turn the power switch on and press the open/close (▲ OPEN/CLOSE) button to open the drawer.
- Set the disc to be played in the front side tray.
- Press the play button (▶).
- The drawer closes and the disc just loaded is played.
- The disc number, track number and elapsed time, etc., for the disc currently playing appear on the display window.
- If the open/close (▲ OPEN/CLOSE) button is pressed while a disc is playing, playback continues, but the drawer opens and four discs can be replaced. The disc that can be replaced switches when the DISC SKIP button is pressed.


Press the open/close (▲ OPEN/CLOSE) button again to close the drawer.

### (2) Stopping Playback

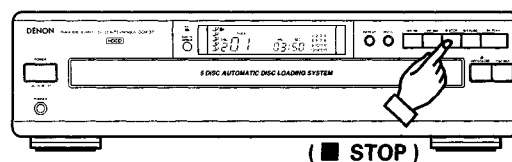

- Press the stop button (■ STOP) to stop playback.
- To replace discs, press the open/close (▲ OPEN/CLOSE) button. The disc which was playing switches over to the front side and the drawer opens.


- Set the disc you want to played in the front side.

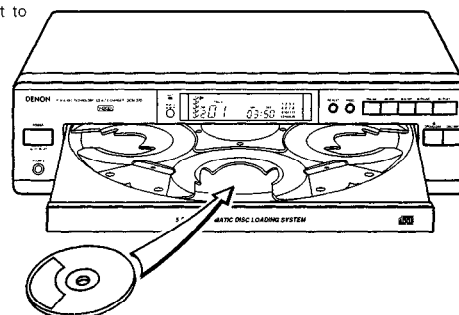

OTHER PLAY METHODS


In addition to normal play, the following methods can be used when playing a disc.

1 To Play the Desired Disc and Desired Track ..... Direct Selection (Remote control only)

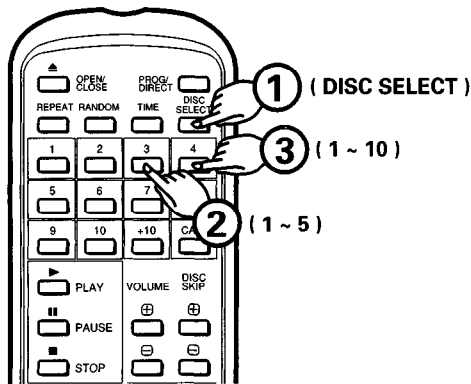


- 1. Press the DISC SELECT button.
- 2. Use the number buttons (1 to 5) to select the number of the disc to be played.
- 3. Next, use the number buttons (1 to 10 and +10) to select the number of the track to be played.
- For example, to play the 4th track on the 3rd disc:  
Press **DISC SELECT**, **3** and **4**.  
To play the 12th track on the 5th disc:  
Press **DISC SELECT**, **5**, **+10** and **2**.  
Playback begins from the number of the disc and track selected.

2 To Move to the Next Disc During Playback ..... Disc Skip

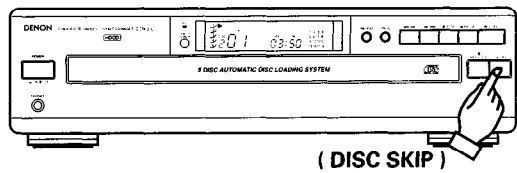


- 1. Press the disc skip button. The carousel in the drawer turns and the disc on the next tray is played.  
For example, if disc number 3 was playing, the disc switches to disc number 4, and if disc number 5 was playing, the disc switches to disc number 1.
- 2. In addition, when the Disc Skip - button on the remote control unit is pressed, the carousel turns in the opposite direction and the previous disc is played.

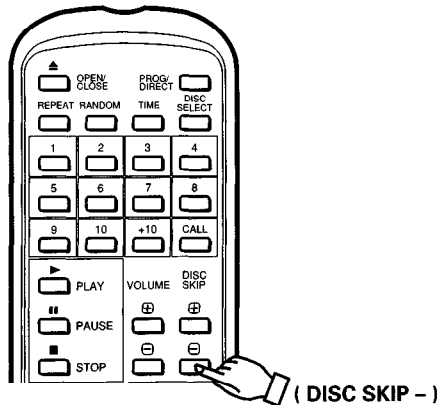


3 To Move to the Next Track during Play ..... Automatic Search

Press the Automatic/Manual search forward button (▶▶/▶▶) for less than 0.5 seconds during playback.

- The pickup will advance to the beginning of the next track and playback will continue. Pressing the button several times will forward the pickup the corresponding number tracks.

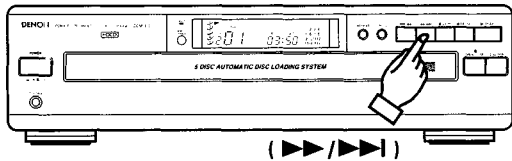


Press the ▶▶/▶▶ button.

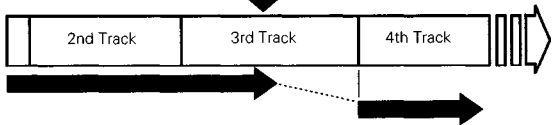

- During Random or Program operation, player moves to the beginning of the next random or program track selection.

4 To return to the beginning of the track now being played ..... Automatic Search

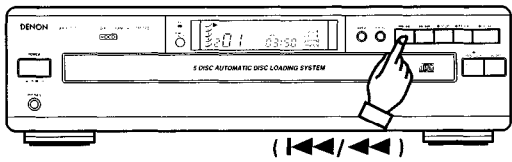


(◀◀/◀◀)

Press the Automatic/Manual search reverse button (◀◀/◀◀) for less than 0.5 seconds during playback.

- The pickup will return to the beginning of the current track and playback will continue. Pressing the button several times will return the pickup the corresponding number tracks.


Press the ◀◀/◀◀ button.

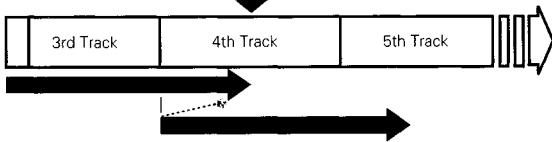

5 To Play the Desired Discs and the Desired Tracks in the Desired Order ..... Program Selection


- You can play certain tracks on the loaded discs in any order.
- Tracks on a disc not loaded can also be programmed, but if you try to play that disc, the microprocessor detects that it is not loaded and the following disc is played automatically.
- Up to 32 tracks can be set in a program.

# (1) Programming (when using the remote control unit)

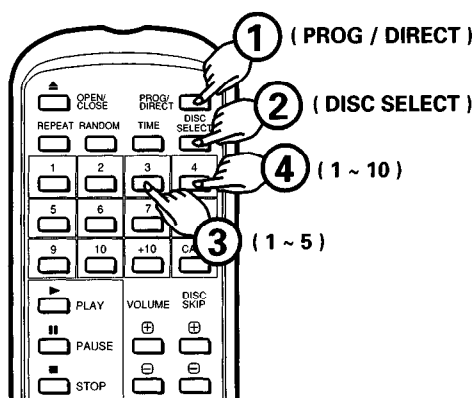


- Press the PROG/DIRECT button. The **PROGRAM** indicator lights. Use the DISC SELECT, number and +10 buttons to select the disc to be programmed.  
For example, to program the 3rd track on the 2nd disc and the 12 track on the 5th disc, press **PROG/DIRECT**, **DISC SELECT**, **2**, **3**, **DISC SELECT**, **5**, **+10** and **2**.

# (2) Programming (when using the buttons on the main unit)

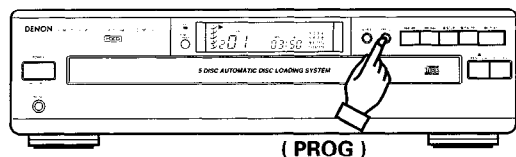


- Press the PROGRAM (PROG) button. The **PROGRAM** indicator flashes. Use the DISC SKIP, Automatic/Manual search reverse (**◀◀/▶▶**), Automatic/Manual search forward (**▶▶/▶▶**) buttons to select the disc to be programmed.  
For example, to program the 3rd track on the 2nd disc and the 12 track on the 5th disc, press the PROGRAM (PROG) button, DISC SKIP button to select the 2nd disc, Automatic/Manual search reverse (**◀◀/▶▶**) or Automatic/Manual search forward (**▶▶/▶▶**) button to select the 3rd track, then press the PROGRAM (PROG) button.  
In the same way, select the 12th track on the 5th disc using the DISC SKIP and Automatic/Manual search buttons, then press the PROGRAM (PROG) button.

# (3) To Check the Programmed Tracks (Remote control only)

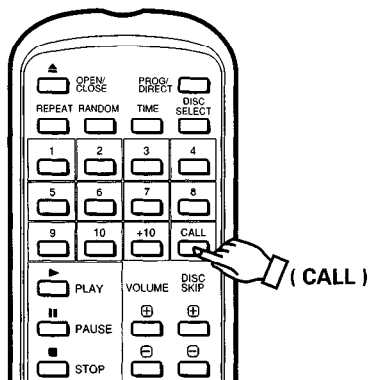

- Press the call button on the wireless remote control unit.  
The contents of the program are displayed in order one item at a time each time the Call button is pressed.

# (4) To Play a Program

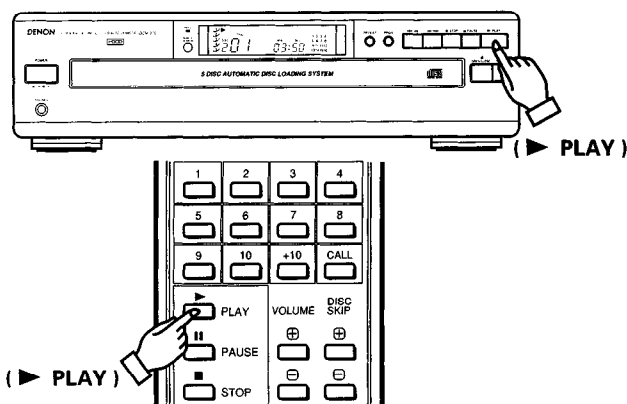

- Press the Play (**▶ PLAY**) button to play the programmed selections in the order in which they were programmed.

# (5) To clear the entire program


- Pressing the PROG/DIRECT button once more erases the entire program. Pressing the open/close (**▲ OPEN/CLOSE**) button also erases the contents of a program.
- Pressing the PROG/DIRECT button while a program is being played cancels the program. Play will then be continuous to the end of the disc currently being played, after which the player will stop automatically.

## Cautions


- If a program is run during playing of a track or from the Pause state, the track which is currently being played becomes the 1st track in the program.
- Direct selection cannot be done while a program is being played. Inputting the track number of a desired track with the Track Number buttons adds the input track to the end of the program.
- When programming, do not program a track number which is not recorded on the disc. If such a number is programmed by mistake, the player ignore the program.

# 6 To Repeat Play of All Tracks ..... Repeat Play


- Press the Repeat (REPEAT) button. The **REPEAT** indicator will light up.  
※ Steps ① and ② can be done in any order, with the same results.

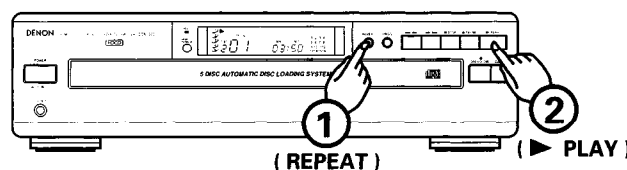


- When the repeat button is pressed once, the **REPEAT** and **1** indicators light. In this mode, the track currently playing is repeated.

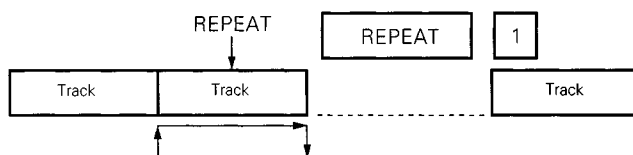

- If the repeat button is pressed again, the **REPEAT** and **1 DISC** indicators light, and the disc currently playing is repeated.

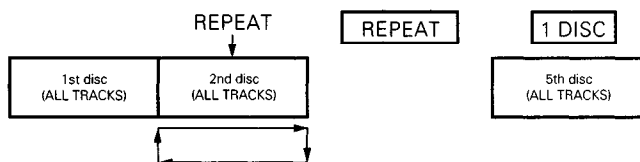

- If the repeat button is pressed again, the **REPEAT**, **ALL** and **DISC** indicators light, and all the discs currently loaded are repeated.

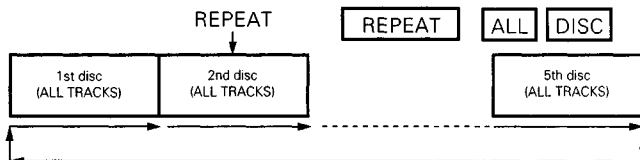


- Pressing the Repeat (REPEAT) button during play will also cause the player to repeat play (of all tracks).
- To cancel repeat play, press the Repeat (REPEAT) button once more.
- Pressing the Repeat (REPEAT) button while a program is being played will cause the tracks in the program to be played again in order.
- Pressing the Repeat (REPEAT) button during Random play will cause the tracks to be played again at random.

## Letting the Player Select the Order of Play


**Random Play**  
(Remote control only)

### (1) Full Random Play

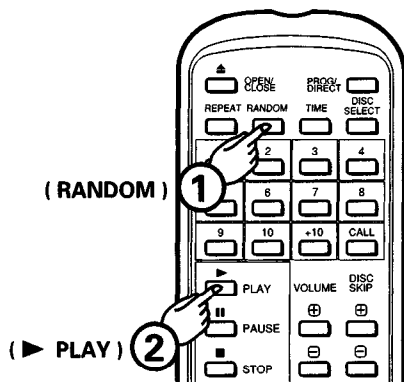


- Press the Random button, then press the Play button. The microcomputer will then start play of the tracks on the 5 discs at random.

### (2) Program Random Play

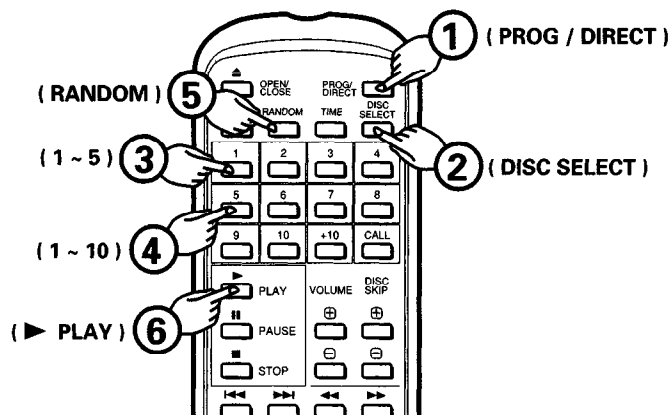

- After pressing the PROG/DIRECT button and inputting a program (See item 5 on page 10 and 11), press the Random button, then the Play button. The microcomputer will then select tracks from the program at random and play them.

### (3) Disc Sequential Random Play

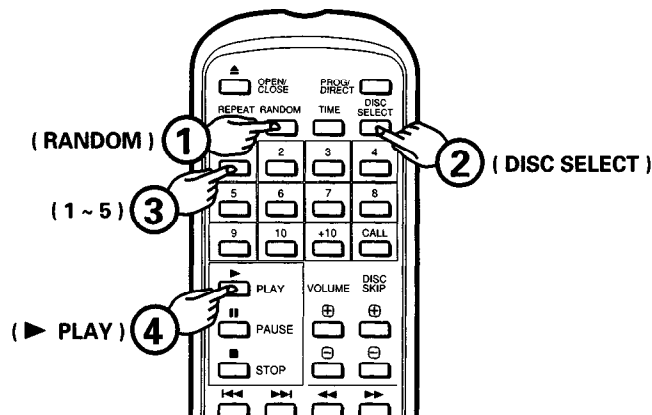

- Press the RANDOM button and specify the disc numbers (1 to 5) with the DISC SELECT button and the number buttons. A press of the PLAY (▶ PLAY) button will result in the player randomly selecting and playing tracks on the disc in the order of specified discs. Up to 5 discs can be selected, and the same disc can be selected, two or more times. Disc sequential random play is cancelled when play ends.


### (4) To Cancel Random Play

- Pressing the Random button once more cancels the Random function. Play will then proceed from the track currently being played to the end of the last track on the disc, then stop. Pressing the open/close (▲ OPEN/CLOSE) button also cancels the Random function.

### Cautions


- Pressing the Random button during normal play starts full random play.
- Pressing the Random button during Program play starts random play of the tracks in the program, including the tracks which have already been played.
- During random play, the player may display the number of disc which is not loaded in the tray. In such a case, the player will read the disc information, then reset automatically to correct. This is not a malfunction.

## 8 To Stop Play Temporarily ..... **Pause**

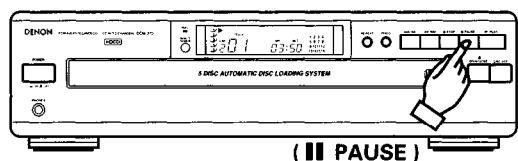

- Pressing the Pause button during play stops play at that point. Pressing the Pause button once more starts play again from the same point.

- Press the Pause ( || PAUSE ) button.

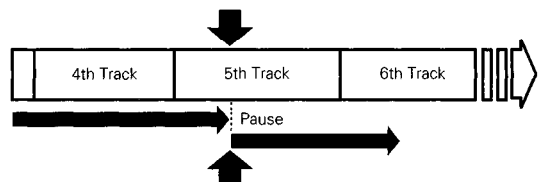


- Press the Play ( ► PLAY ) button or the Pause ( || PAUSE ) button to start play.

## 9 Audible quick search ..... **Manual Search**


- Using this function, you can cue to a desired point within a track, either in the forward or reverse direction.
- Release the Automatic/Manual search button ( ◀◀◀/▶▶▶ or ▶▶▶/▶▶▶ ) when the desired point has been reached. Normal playback then continues.

### (1) Manual Search Forward

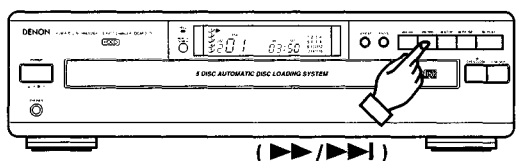

- Keep on pressing the Automatic/Manual search forward button ( ▶▶▶/▶▶▶ ) for more than 0.5 seconds during playback. Playback of the track is sped up.
- As a reference, the current track number and elapsed playback time within the track are displayed.
- Manual search forward is approximately 4 times faster when the Automatic/Manual search forward button ( ▶▶▶/▶▶▶ ) is kept on pressing more than 5 seconds.
- If the Automatic/Manual search forward button ( ▶▶▶/▶▶▶ ) is kept pressed after the end of the final track on the disc is reached, ( 33 ) is displayed and manual search stops. To return to another point, press the Automatic/Manual search reverse button ( ◀◀◀/◀◀◀ ) until ( 33 ) disappears.
- If the Automatic/Manual search forward button ( ▶▶▶/▶▶▶ ) is kept on pressing and the end of the current track is reached during random play or programmed play, the next track is searched and playback starts.

### (2) Manual Search in Reverse

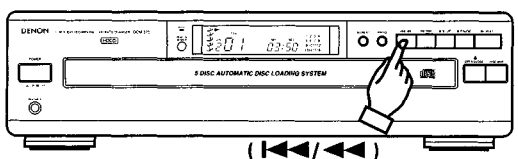


- Keep on pressing the Automatic/Manual search reverse button ( ◀◀◀/◀◀◀ ) for more than 0.5 seconds during playback. Reverse playback of the track is sped up.
- As a reference, the current track number and elapsed playback time within the track are displayed.
- Manual search in reverse is approximately 4 times faster when the Automatic/Manual search reverse button ( ◀◀◀/◀◀◀ ) is kept on pressing more than 5 seconds.
- If the Automatic/Manual search reverse button ( ◀◀◀/◀◀◀ ) is kept pressed after the beginning of the first track on the disc is reached, ( 11 ) is displayed and manual search stops. To return to another point, press the Automatic/Manual search forward button ( ▶▶▶/▶▶▶ ) until ( 11 ) disappears.
- If the Automatic/Manual search reverse button ( ◀◀◀/◀◀◀ ) is kept on pressing and the beginning of the current track is reached during random play or programmed play, the manual search in reverse is canceled and playback starts.

## 10 To Cue and Stop Play ..... **Pause**

(Remote control only)

### (1) Cueing by Direct Selection

- Cueing by direct selection, then entering the Pause state, is convenient for practicing vocals with background music.

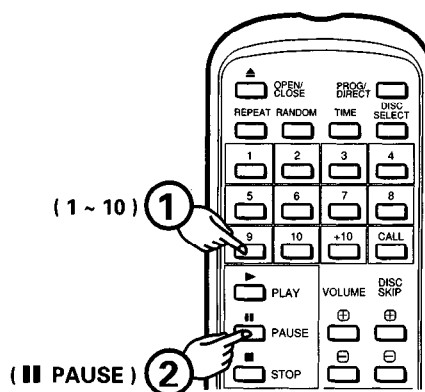

- Press the Track Number buttons to set the number of the desired track.
- Press the Pause ( || PAUSE ) button.
- To start play, press the Play ( ► PLAY ) button or the Pause ( || PAUSE ) button.

### (2) Cueing by Program Selection

- After setting the desired track selections in a program, press the Pause ( || PAUSE ) button. The player will advance to the beginning of the 1st track in program memory and wait in the Pause state.

## 11 Synchronized Recording

### Function ..... **Synchronized Recording Function**

Connecting the SYNCHRO jack with a DENON cassette deck which is equipped with a SYNCHRO jack will allow synchronized recordings to be made.

- To use this function, be sure to connect the SYNCHRO jacks as well as the output terminal (LINE OUT). (Refer to page 9 for connections.) Then, load a disc.
- With the CD player in the stop or pause condition, starting a synchronized recording at the cassette deck side will automatically cause the CD player to start playing. (This is synchronized play.)
- The remote control indicator of the display will blink during synchronized play.

### NOTES:

- Synchronized play is also possible in the program mode.
- The repeat mode are cancelled when synchronized play is started.
- Except for the Stop ( ■ STOP ), Play ( ► PLAY ) and TIME buttons, the buttons will not operate during synchronized play.
- In the play condition, even if you start a synchronized recording at the cassette deck side, CD player will not synchronize with the cassette deck and the cassette deck becomes synchronized pause condition. In this case push the Stop ( ■ STOP ) button of the cassette deck, set the CD player in the stop or pause condition and start a synchronized recording at the cassette deck side again.
- For further details, see the owner's manual for the cassette deck that has been connected.

COMPACT DISCS

1. Cautions in Handling Compact Discs

- Do not get fingerprints, oil, dirt or other substances on the compact disc. If the disc becomes dirty, wipe it off with a dry, soft cloth.
- Do not clean compact discs with benzene, paint thinner, water, record spray, anti-static agent, silicon cloth or similar substances.
- Take particular care to prevent scratches to the back side of the compact disc when removing it from the case and when inserting it in its case.
- Do not bend compact discs.
- Do not apply to compact discs.
- Do not attempt to enlarge the center hole of the disc.
- Do not write on the label (printed) side of the disc with a ball point pen or pencil.
- Bringing a CD into a warm room from a cold place could cause moisture to condense on the disc surface. Do not attempt to dry the disc with a hair dryer, etc.

2. Storage of Compact Discs

- After play, be sure to remove the disc from the player.
- To prevent dust, scratches, deformation, etc., be sure to store compact discs in their case.
- Do not store compact discs in the following locations.
  1. Places where direct sunlight strikes for long periods of time.
  2. Places with a high humidity or a lot of dust.
  3. Places reached by heat from a heater or similar appliance.

TROUBLE? CHECK THE PLAYER TO FIND WHAT’S WRONG

Even when it appears that there is trouble, check the following points carefully.

**The drawer won’t open/close when the Open/Close button (⏏ OPEN/CLOSE) is pressed.**

- Is the Power switch on?

**After a disc is loaded (0 00 00M 00S) is displayed in the display window.**

- Is the disc loaded correctly? .....See page 8, 9, 16.

**Play does not begin when the Play button (▶ PLAY) is pressed.**

- Is the disc dirty or scratched? .....See page 16.

**There is no sound, or the sound is distorted.**

- Is the output cord connected correctly to the amplifier? .....See page 8.
- Does the sound return to normal when the amplifier’s knobs are adjusted or the proper input device is selected?

**The player won’t go to the place specified in the search.**

- Is the disc dirty or scratched? .....See page 16.

**A program cannot be played.**

- Is the method used to make a program and run it correct? .....See page 10.

**The player won’t operate correctly when the remote control unit is used.**

- Are the dry batteries in the remote control unit dead? .....See page 14.
- Is the remote control unit located too far from the CD Player unit? .....See page 14.

SPECIFICATIONS

AUDIO	DCM-370	DCM-270
Number of Channels:	2 Channels	
Frequency Characteristics:	2 ~ 20,000 Hz	
Dynamic Range:	100 dB	98 dB
S N Ratio:	112 dB	108 dB
High Frequency Distortion:	0.0025% (1kHz)	0.003%
Separation:	98 dB	96 dB
Wow and Flutter:	Less than the measuring (±0.001% W. peak)	
Output Voltage:	Variable 0.2 ~ 2.0 V	
DISC USED	Audio compact discs are used	
	12 cm (5 in) and 8 cm (3 in)	
OVERALL		
Power Supply:	60 Hz	
	Voltage is shown on rating label	
Power Consumption:	15 W	
External Dimensions:	434 (W) x 115 (H) x 392 (D) mm (17-3/32" x 4-17/32" x 15-7/16")	
Weight:	5.7 kg (12.6 lbs.)	5.7 kg (12.6 lbs)

FUNCTIONS AND DISPLAY

Functions:	Five discs can be used, Direct Track Selection, Program Selection, Random Play, etc.
Displays:	Disc No., Track No., Time (min., sec.), Play, Pause, Repeat, Random, etc. Headphone Jack (Level Variable)
Other:	
REMOTE CONTROL UNIT RC-258	
Remote Control Method:	Infrared Pulse system
Power Supply:	3 V DC Two R6P (standard SIZE AA)
External Dimensions:	50 (W) x 175 (H) x 18 (D) mm (1-31/32" x 6-57/64" x 45/64")
Weight:	100g (approx. 3 oz) (Includes batteries)

HDCD® and High Definition Compatible Digital® are registered trademarks of Pacific Microsonics, Inc.

\* Design and specifications are subject to change without notice in the course of product improvement.

## DENON SERVICE NETWORK/服務網絡

- Please contact one of our overseas service centers, listed below, for follow-up service consultation.
- Adressez-vous à nos centres de service d'outre-mer indiqués ci-dessous, pour le service après-vente.
- Para consultas de servicio porfavor dirigirse a cualquiera de nuestros centros de servicio en el extranjero, enlistados abajo.

<b>Australia</b>	AWA Audio Products Pty Ltd. 67 O'Riordan Street, Alexandria NSW 2015, Australia Tel: (02) 9669-3477 Fax: (02) 9578-0140
<b>Austria</b>	Digital-Professional-Audio Vertriebsges.m.b.H., 1170 Wien, Rupertusplatz 3 Tel: 0222-4501006~9, Fax: 0222-457679
<b>Belgium</b>	Transtel-Sabima P.V.B.A. Harmoniestraat 13, 2018 Antwerpen 1, België Tel: 03-237-3607
<b>Canada</b>	Denon Canada Inc. 17 Denison Street, Markham Ontario, Canada L3R 1B5 Tel: 905-475-4085 Fax: 905-475-4159
<b>China</b>	Shanghai Denon Products Service Co., Ltd. Room 1504, A Building 527 Huaihai Zhong Road, Shanghai 200020, P.R.C. Tel: (021)53062078 上海天龍音響產品服務有限公司 中國上海市淮海中路527號A樓1504室 郵編：200020 電話：(021)53062078
<b>Czecho</b>	EUROSTAR OSTORAVA s.r.o. Za Vokovikou vozovnou 369/5, 161 00 Praha 6 Tel: 2-316-3690 Fax: 2-316-6852
<b>Denmark</b>	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
<b>Finland</b>	Suomen Hi-Fi Klubi OY Nylandsgatan 4-6, Helsingfors Tel: 0644401
<b>France</b>	Denon France S.A. 3 Boulevard Ney, 75018 Paris Tel: 44-89-68-69
<b>F.R. Germany</b>	Denon Electronic GmbH Halskestraße 32, 40880 Ratingen Tel: 02102-4985-0
<b>Greece</b>	KINOTECHNIKI LTD: 47 Stournara Str., Athens Tel: 380-6998
<b>Hong Kong</b>	Denon Hong Kong Ltd., 18/F, No.79 Chatham Road South, Tsimshatsui, Kowloon, Hong Kong Tel: 2516-6862, Fax: 2516-5940 香港九龍尖沙咀漆咸道南 七十九號 十八樓 電話：2516-6862
<b>Iceland</b>	Japis Ltd. Brautarholt 2, Box 396, 121 Reykjavik, Iceland Tel: 5625200
<b>Indonesia</b>	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: 633-2730
<b>Italy</b>	Melchioni S.P.A. Via P. Colletta 37-20135 Milano Tel: (02) 57941
<b>Korea</b>	DAIYOUNG Industrial Co.,Ltd. 1027-5, Bangbae-dong, Seocho-gu, Seoul 137-060 Korea Tel: 02-588-3960 Fax: 02-586-3721
<b>Malaysia</b>	Pertama Audio (PJ) Sdn. Bhd. 38, 40 & 42 Jalan PJS 11/28A Sunway Metro Bandar Sunway 46510 Selangor, Malaysia Tel: 03-7378888 Fax: 03-7378188
<b>Mexico</b>	Labrador, S.A. de C.V. Zamora No. 154 Col. Condesa 06140 Mexico, D.F. Tel: 286 55 09 Fax: 286 34 62
<b>Netherlands</b>	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
<b>New Zealand</b>	Avalon Audio Corpn. Limited 119 Wellesley Street, Auckland 1, New Zealand Tel: 09-779-351, 09-775-370
<b>Norway</b>	Hi-Fi Klubben Box 70 Ankertorget, 0133 Oslo 1 Tel: 02-112218
<b>Poland</b>	HORN DISTRIBUTION ul. Nowoursynowska 131R (wjazd od ul. Rosota) 02-975 Warszawa Tel: 22-649-3071 Fax: 22-649-3199
<b>Portugal</b>	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: 2187004/2187096
<b>Singapore</b>	Denon Electronics Singapore Pte Ltd. 257 Selegie Road #03-257 Selegie Complex Singapore 188350 Tel: 65-339-1181 Fax: 65-339-8366
<b>Spain</b>	Gaplasa S.A. Conde de Torroja, 25, 28022 Madrid Tel: 91-329-42-63
<b>Sweden</b>	Sveriges Hi-Fi Klubb Box 5116, S-402 23 Göteborg Tel: 031-200040
<b>Switzerland</b>	Diethelm & Co., AG. Grindelstrasse 5, 8303 Bassersdorf Tel: 01-838-1611
<b>Taiwan R.O.C.</b>	Taiwan Kolin Co., Ltd. 10th Fl., 86, Sec. 1, Chung-king S. Rd., Taipei, Taiwan R.O.C. Tel: (02) 314-3151 (20 Lines) Fax: (886) 02-3614037 Telex: 11102 TKOLIN
<b>進口廠商</b>	KOLIN 歌林股份有限公司 台北市重慶南路一段86號10樓 電話：(02) 314-3151
<b>Thailand</b>	Mahajak Development Co., Ltd. 6th Fl., Mahajak Building, 46 Sukhumvit 3 (Nananua), Klongteoy, Prakanong, Bangkok 10110 Tel: 256-0020
<b>United Kingdom &amp; Eire</b>	Hayden Laboratories Ltd. Hayden House, Chiltern Hill, Chalfont St.
<b>U.S.A.</b>	Peter Gerrards Cross, Bucks, SL9 9UG Tel: 01753-888447 DENON ELECTRONICS, a Division of Deonon Corporation (U.S.A.) 222 New Road Parsippany, NJ07054, U.S.A., Tel: 973-396-0810, Fax: 973-396-7448

- \* If there is no service center in your local area, consult the outlet where the equipment was purchased.
- \* S'il n'y a aucun centre de service dans votre région, consultez votre revendeur.
- \* Si no hay centros de servicio en su área local, consulte en donde haya comprado su equipo.

**NIPPON COLUMBIA CO., LTD.**

14-14, AKASAKA 4-CHOME, MINATO-KU, TOKYO 107-8011, JAPAN

Telephone: (03) 3584-8111

Cable: NIPPON COLUMBIA TOKYO Telex: JAPANOLA J22591



This warranty will be  
honored only in the U.S.A.

# DENON<sup>®</sup>

## LIMITED WARRANTY

### Length of Warranty

This warranty on your DENON audio product which is distributed and warranted by DENON ELECTRONICS, a Division of DENON Corporation (U.S.A.) remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS, a Division of DENON Corporation (U.S.A.) DEALER.

#### Product Category

Turntables	(1) Autolift	(DP-L)	4 years
	(2) Full Automatic	(DP-F)	2 years
Tuners, Integrated Amplifiers		(TU, PMA)	3 years
Preamps, Digital Preamps, Poweramps, Head Amplifiers		(PRA, AVP, DAP, POA, HA)	3 years
Digital Surround Decoder		(AVD)	3 years
A/V Controllers, A/V Receivers, AM/FM Receivers		(AVC, AVR, DRA)	2 years
Compact Disc Players, Laser Disc Players, DVD Players		(DCD, DCM, DP, DA, LA, DVD)	1 year
Tape Recorders, Digital Audio Tape Recorders, Minidisc Recorders		(DRM, DRR, DRS, DRW, DTR, DMD)	1 year
Karaoke Systems		(DCG, HMA)	1 year
Cartridges, Accessories		(DL, AU)	90 days

### What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below.) (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD discs. (9) Use in industrial, commercial, and/or professional applications.

### What We Will Pay For

If during the applicable warranty period from date of original consumer purchase your DENON audio product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

### How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.). In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required;  
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.**
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a Compact Disc Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

### THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

**THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

**OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND.**

**SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.**

This Warranty gives you specific legal rights, but you may also have other rights which vary from state to state.

**DENON<sup>®</sup> ELECTRONICS,**  
a Division of DENON Corporation (U.S.A.)

Mailing address only: DENON ELECTRONICS,  
P.O. Box 5370  
Parsippany, N.J. 07054-5370

**DENON**

**DENON ELECTRONICS,**

222 New Road  
Parsippany, N.J. 07054  
(973) 396-0810  
(973) 396-7448 FAX

**DENON ELECTRONICS,**

13825 Cerritos Corporate Dr., Suite B,  
Cerritos, CA 90703-2456  
(562) 404-0200  
(562) 404-4500 FAX

**DENON REGIONAL SUPER SERVICE CENTERS** (Repair only — No parts orders please)

**PYRAMID AUDIO**

8711 Burnet Rd.  
Building F, Suite 65  
Austin, TX. 78758  
(512) 458-8292  
(512) 453-4542 FAX

**UNITED RADIO**

2949 Erie Boulevard East  
Syracuse, N.Y. 13224  
(315) 446-8700  
(315) 446-8505 FAX

**AUDIO SERVICES**

544 Central Dr., Suite 101  
Virginia Beach, VA 23454  
(757) 498-8277  
(757) 498-9554 FAX

**ELECTRO SERVICES**

2144 Columbia Avenue  
Lancaster, PA 17603  
(717) 397-0509  
(717) 397-9565 FAX

# DENON® WARRANTY REGISTRATION

MODEL NO. _____	SERIAL NO. _____	DATE SOLD _____
-----------------	------------------	-----------------

DEALER NAME \_\_\_\_\_

DEALER ADDRESS \_\_\_\_\_

DEALER TELEPHONE \_\_\_\_\_

PURCHASER'S NAME _____		
STREET ADDRESS _____		
CITY _____	STATE _____	ZIP _____
AREA CODE _____	PHONE NO. _____	

**A) Who/What was the greatest influence in your final decision to purchase this product?**

- |  |   |
|--|---|
| 1. <input type="checkbox"/> Advertising      | 5. <input type="checkbox"/> Price                       |
| 2. <input type="checkbox"/> Denon brand name | 6. <input type="checkbox"/> Product brochure/literature |
| 3. <input type="checkbox"/> Product features | 7. <input type="checkbox"/> Salesperson                 |
| 4. <input type="checkbox"/> Friend/Relative  | 8. <input type="checkbox"/> Other (specify : _____)     |

**B) What other audio equipment do you presently own? Please indicate the make and model.**

Turntable _____	Reel-to-Reel _____
Cartridge _____	Speakers _____
Tonearm _____	Headphones _____
Head Amp/Transf. _____	Blank Tape _____
Amplifier _____	Brand _____ Length _____
Integrated Amp _____	Accessories _____
Tuner _____	Cleaners, _____
Receiver _____	cables, _____
Cassette Deck _____	etc. _____

**C) What equipment do you plan to purchase in the next 6 months?**

Category \_\_\_\_\_

Price Level \_\_\_\_\_

**D) Please list the periodicals (Magazines, newspapers, etc.) which you read regularly.**

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_